



7" COLOUR eBook READER AND MEDIA PLAYER

SETUP GUIDE



- 1 UNPACK**
Unpack the eBook Reader from the packaging




- 2 CONNECT**
Connect the USB cable from the eBook Reader to a USB port on your computer



- 3 PLUG IN DEVICE**
When the eBook reader is plugged into the USB port of your computer the AutoPlay screen will appear. Click "Open folder to view files"

If the AutoPlay screen does not appear, see "Importing & Transferring Content" on page 7 of the instruction manual for detailed instructions

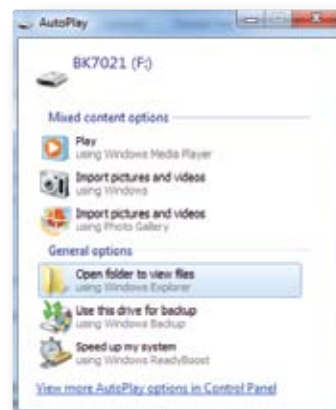

- 4 ONCE CONNECTED**
The Cocoon eBook Reader files will appear on your screen. Copy and paste your favourite eBooks, music, video or photos into their respective folders

Video	File folder	31/05/2013 9:1...
Music	File folder	31/05/2013 9:1...
eBook	File folder	01/03/2013 7:5...
Digital Editions	File folder	31/05/2013 9:1...

Note: For DRM protected eBooks, see detailed instructions on page 8



7" COLOUR eBook READER AND MEDIA PLAYER

SETUP GUIDE



5 TURN "ON"

Once the eBook has charged for a minimum 6 hours on first charge, unplug the eBook from USB. Press the power button on the bottom of the unit for 1 second to turn on the device



6 NAVIGATING THE HOME MENU

When the eBook Reader is turned on the Home Menu will be displayed. You can use the directional buttons to select the eBook you would like to read



7 SELECTING THE BOOK

Highlight the eBook you would like to read and press the OK button to open the file

